

## 9.2 Placards regarding the power-plant

The consecutive numbers given with the labels refer to their location in the aircraft and match the numbers shown in the specific views in this section (Fig. 9.2-1 and Fig. 9.2-2).

50



These placards are affixed to the engine control panel next to the power lever.

51




This placard is affixed directly at the Power-plant main switch.

52



This placard is affixed directly at the starter button.

53

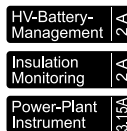

Affixed in this order at the height of the respective fuse.